




Battery Care

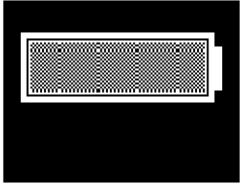

The battery is ok, no need for charging.

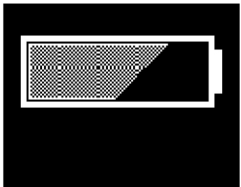

Battery needs charging.

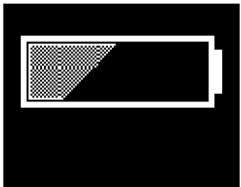

Battery needs charging. Buzzer sound is provided when a button is pressed at this battery stage.

How to use the lowering/lifting function on the control box

(Emergency USE)

- On the control box there are either buttons or holes.
- The lifting arm can be lowered or lifted via pressing a pen (or similar) in the hole.
- This is a permitted method of lowering/ lifting.
- The lowering/lifting “buttons” works as normal hand control buttons (you do not get extended functionality by using these when the battery is low).

